


Learning procedure for IR remote control type 6CS99001

Ref. PI 359 SPORT FLASH, PI 369 SMART, PI 387 SKIPPER, PI 459 JUNIOR, and other external non rotating passerelles

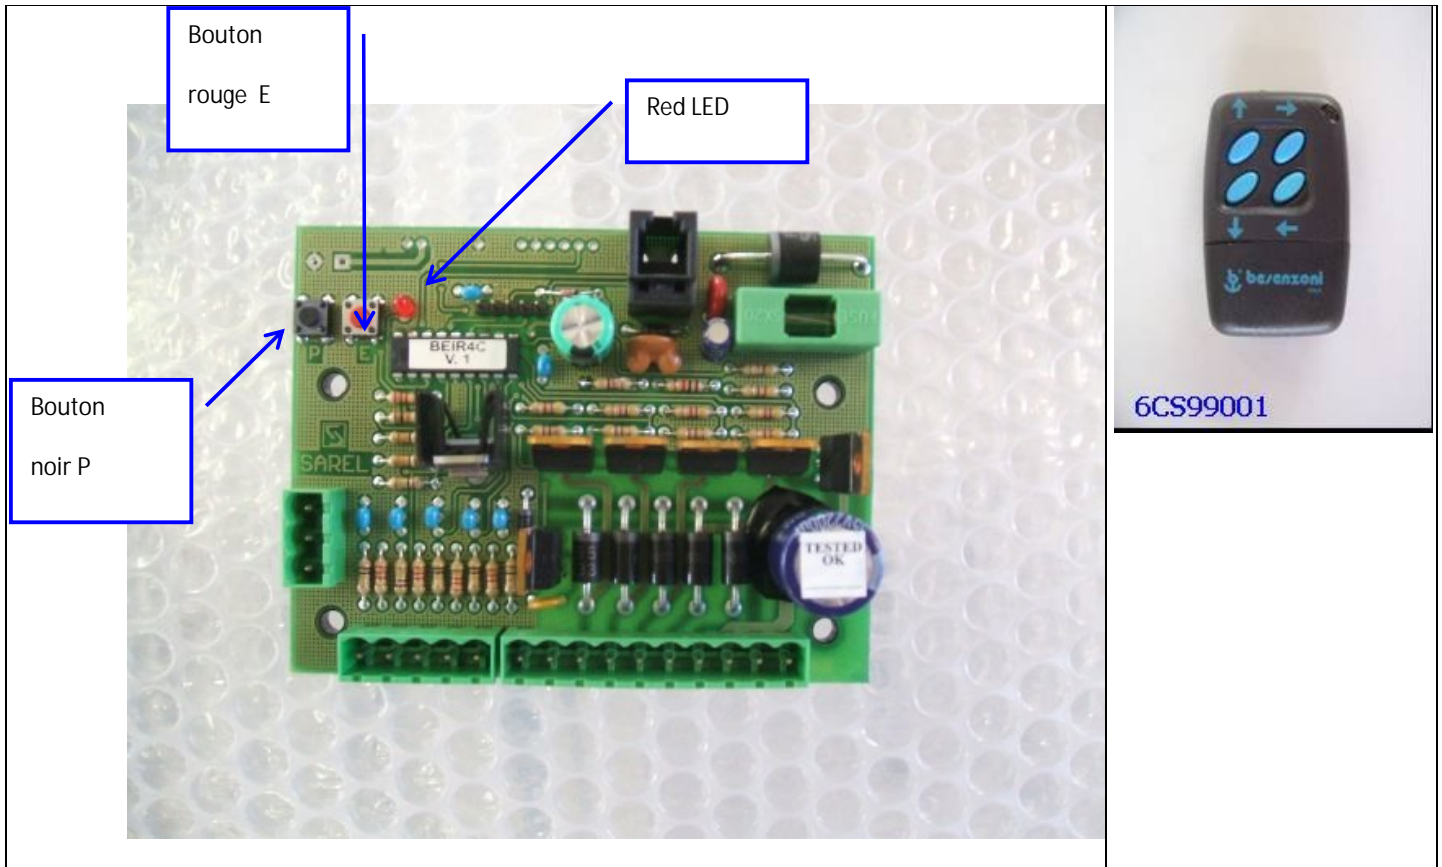

POWER PACK	DESCRIPTION
	<ol style="list-style-type: none"> <li>1. Press the key P program until the red LED LD1 light on;</li> <li>2. Release the key;</li> <li>3. Approach the remote control in front of IR receiver and press any one of push-button;</li> <li>4. Press again key P program until the red LD1 extinguishes to go out of programming and release the key;</li> <li>5. The system is ready;</li> </ol> <p><b>NB:</b> Without go out of programming (see phase 3) no one command is possible</p> <p style="text-align: center;"><b>ERASING REMOTE CONTROLL</b></p> <ol style="list-style-type: none"> <li>1. Press the key E erase until the red LED LD1 blinks ;</li> <li>2. Release the key;</li> <li>3. All remote control code in memory are erased;</li> </ol>

MEMORY RESET PROCEDURE

- 1) Keep pressed the RED button E (erase) during 10s , until the red LED flashes confirming that memory has been erased
- 2) Switch off the power supply and wait at least for 1 minute.
- 3) Switch on the power supply and execute the learning procedure for each remote