3-POSITION BILGE PUMP PANEL SWITCH


The switch can be activated (indicated by the red light) in two ways:

MAN: This is a momentary-on switch that allows the operator to control the operation of the pump, bypassing the float switch. The switch automatically returns to off when released.

AUTO: This allows the automatic float switch to control the operation of the pump.

INSTALLATION INSTRUCTIONS

- (A) Cut a 43mm x 59mm (1-11/16" x 2-5/16") hole in dashboard.
- (B) Wire by attaching the hot lead from the battery to the back of the fuse holder. Next connect one lead from the float switch to one of the terminals on the back of the switch. Connect the other wire from the switch in series with the pump and connect to the other terminal on the switch as shown in the diagram below:

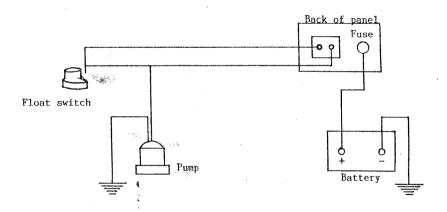

Recommended Fuse Sizes

	400 GPH Pump	600 GPH Pump	1400 GPH Pump	1850 GPH Pump
12 volts	5A	10A	15A	20A ·