


Installation of Security Strap

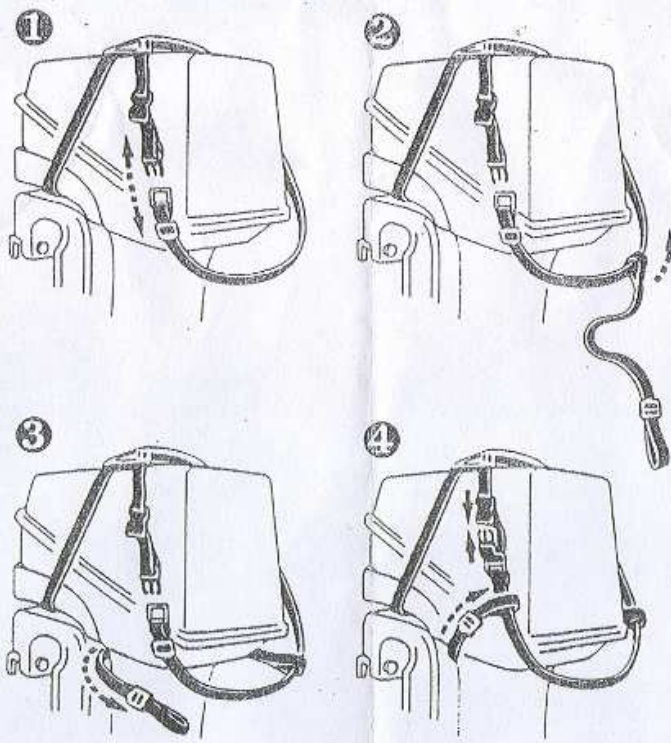

Security Strap goes around **FRONT** of motor.

4739100